

## Overloading

If the scale is overloaded, the following message will be displayed: **Err**.

Remove weight immediately or damage to the scale may occur.

## Low Battery Indicator

When **LO** is displayed on the readout, the battery must be replaced.

*Remember, always use a good quality alkaline battery and ensure it is not faulty before use.*

## Battery Warning

### **BATTERY WARNING:**

#### **INTERNAL BURNS / CHOKING HAZARD**

Swallowing batteries may lead to serious injury or death (severe burns can occur within 2 hours).

#### **IMMEDIATELY SEE A DOCTOR**

#### **Emergency Telephone Numbers**

AUSTRALIA 000 NEW ZEALAND 111

#### **Poisons Information Centre**

AUSTRALIA 13 1126 NEW ZEALAND 0800 764 766

#### **KEEP BATTERIES OUT OF REACH OF CHILDREN**

*Dispose of batteries immediately and responsibly*

- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type are to be used.
- Batteries are to be inserted with the correct polarity.
- Remove exhausted batteries from the product.
- Remove batteries from the battery compartment when not in use.
- Never throw batteries in a fire or attempt to open up their outer casing.

## Caring for your scale

To clean your scale, use a lightly dampened cloth (do not use solvents). Do not place the scale in a microwave, dishwasher or immerse in water.

Remove the battery from the scale if the scale is not being used for a long period of time.

## Specifications

Model 1100

Capacity: 2kg or 4lb 6oz

Graduation: 2g or 1/8 oz

Liquid Crystal Display

Battery: 1 x 9 volt alkaline battery, not included

Made in China for

**Propert Housewares**



A division of  
SUPERTEX INDUSTRIES PTY LTD  
- a wholly-owned Australian company  
ABN 85 003 833 029

For further information -

website: [www.supertex.com.au](http://www.supertex.com.au)

Email: [customerservice@supertex.com.au](mailto:customerservice@supertex.com.au)

Telephone: (02) 8756 3000

Facsimile: (02) 9748 6622



A signatory to the  
Australian Packaging Covenant



V1.0401

**Propert®**



# ELECTRONIC KITCHEN SCALE

**Model 1100**

## Instructions for Use

1. Install the 9-volt alkaline battery into the battery compartment located on the underside of the scale. Connect the battery and make sure the positive (+) and negative (-) terminals are correctly positioned. Replace the battery compartment.
2. Place your scale on a firm flat surface. If you intend to use a bowl or another container, place it on the platform before turning the scale on.
3. Press the **On/Off/Tare** button to turn the scale on. The readout will display **8888** followed by **0**. When **0** appears, place the item you want to weigh onto the scale. The weight of the item will now be displayed. As more weight is added or removed, the display will automatically increase or decrease.
4. While the scale is turned on and the **0** appears, press the **On/Off/Tare** button to change between metric (kilograms and grams) and imperial (pounds and ounces) units.  
*Note: Use this function just before placing the item on the scale, or the display will show 0.*


## Instructions for the Tare Weighing Function

The Scale allows you to weigh each additional item as it is added to the scale.

1. After weighing the first item on the scale and with the first item still on the scale, press the **On/Off/Tare** button to reset the scale to zero
2. Add the second item to the scale. The scale will now display the weight of the second item only.
3. If you have additional items to weigh, repeat the instructions in 1 and 2. The total weight of all the items on the scale (including the bowl or container if using one), must not exceed the capacity of the scale, which is 2kg or 4lb 6oz.

## Instructions for the Count Down Timer

The Scales provides a digital built-in count down timer with beeper alarm.

1. Press the **On/Off/Tare** button to turn the scale on. The readout will display **8888** followed by **0**.
2. When the **0** appears, press the **SET** button. The timer symbol  (top left hand corner) and **00:00** will be displayed. *The first two digits are minutes and the second two digits are seconds.*
3. To set the required time, press **SET** again. The first digit will flash. Press the **ADVANCE** button to change the next required time.

4. To select the next digits and change the next required time, repeat the instructions in 3.
5. When all the digits that require changing have been altered, the correct time is showing and, with the last digit still flashing, press the **SET** button. The timer is now ready.  
*Note: If **00:00** re-appears, you have pushed the SET button once more than required and the timer has re-set itself. You will need to repeat the instructions from 3-5.*
6. To start the timer count down, press the **ADVANCE** button.
7. To stop the count down timer, press the **SET** button or press and hold the **SET** button around 3 seconds.  
*Note: Once the timer function has been selected (ie: by pressing the **SET** button), the scale will not automatically turn off.*

## Automatic Switch Off

Turn the scale off at any time by pressing the **On/Off/Tare** button for about 3 seconds. The scale will automatically switch off about 2 minutes after the last weight has been added or removed, prolonging battery life.

*Note: The scale will not automatically turn off once the timer function has been selected.*